


Pool-in-Pool Underguide Deck Detail

Sloping the first deck to the pool prevents water from puddling on the cover where the cover pump does not remove water. The outer edge of the first deck where the encapsulation is installed should be $\frac{1}{2}$ to 1 inch higher than the pool, depending on deck span. Keep deck level where encapsulation will be located. Slope will vary as the pool edge approaches the encapsulation.

Water line elevation should be as close to Guides as possible. Pour first deck to the top edge of fiberglass pools. If using coping stones on pool edge, Use 1" to 1 $\frac{1}{2}$ " inch thick and rub edge smooth.

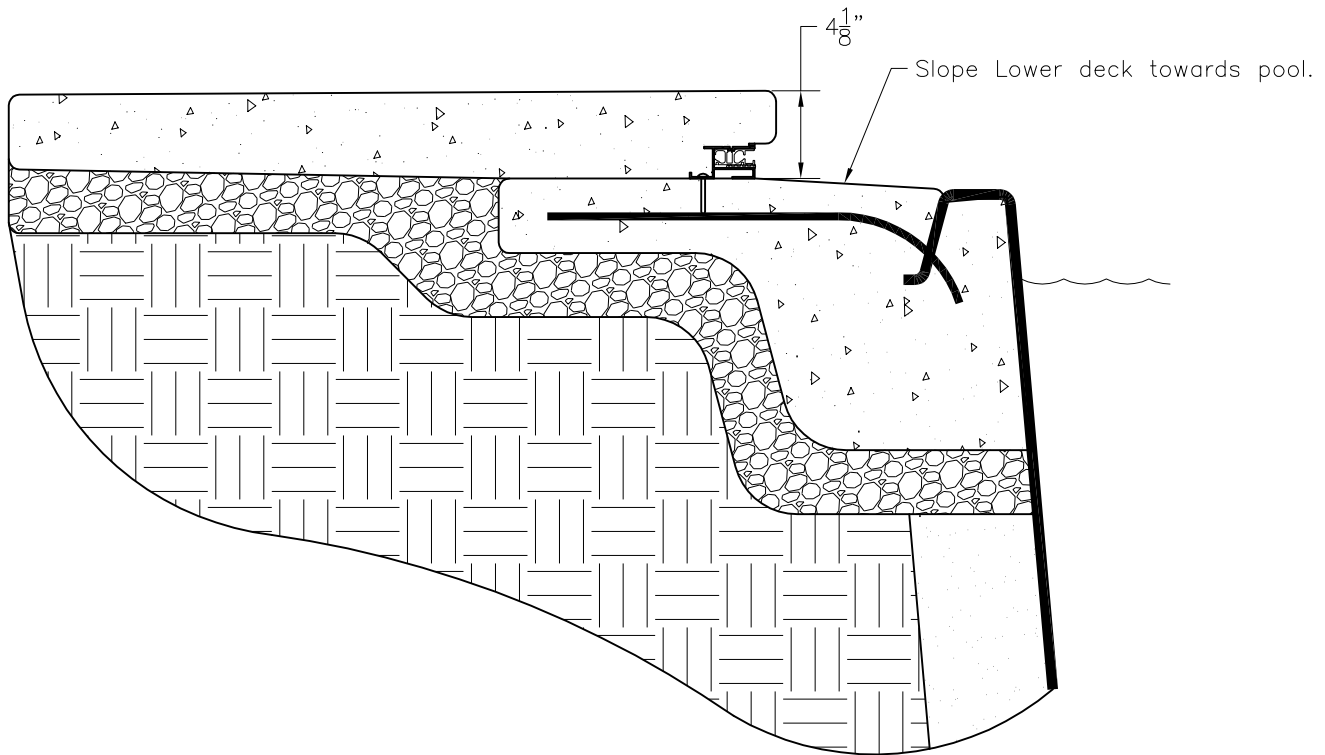

Lower Deck (first pour)

Upper Deck (second pour)

